


For connecting 15 Laporte traps pull 16 wired cable (0.75mm²).

TRAP RELEASE CABLING SCHEME FOR TRAP LAYOUT

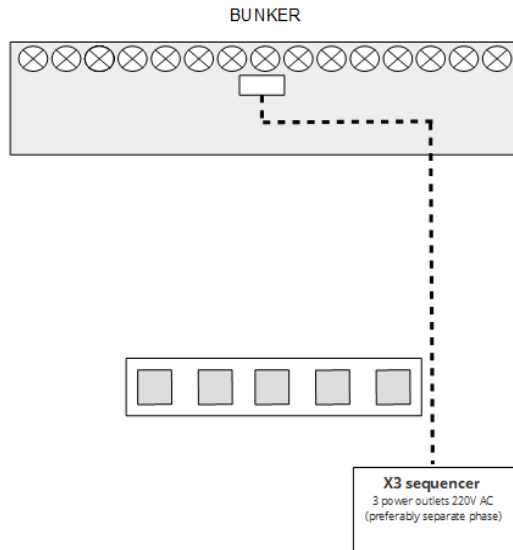


LEGEND

- Trap release cable, 16 wires, dimension: 0,75mm²
- ⊗ Trap
- Junction box

Cables go from sequencer to each trap/junction box of any trajectory

X3 sequencer has two relay boards **GATE 1 (Ports 1-15)** and **GATE 2 (Ports 16-30)**. To connect Traps for Olympic Trap use 15 ports from upper Gate 1:

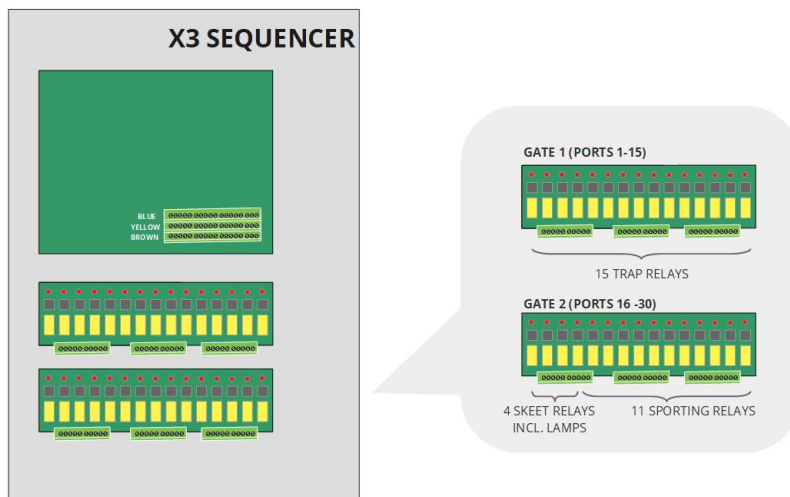

Each wire should be connected to the terminal block as shown on the picture bellow. In addition you need to bridge all wires with the plus (+)/brown wire coming from Laporte junction box:

